



SUBURBAN MANUFACTURING COMPANY
Post Office Box 399
Dayton, Tennessee 37321

OWNERS' INFORMATION MANUAL DIRECT SPARK IGNITION For Model DD-17DSI

This book contains instructions for operating and maintaining the furnace. Keep with unit at all times.

Should you require further information, contact your dealer or nearest Suburban Service Center.

WARNING! Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Refer to the installation instructions and/or owners manual provided with this appliance.

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
 - Extinguish any open flame.
 - Evacuate all persons from the vehicle.
 - Shut off the gas supply at the gas container or source.
 - Do not touch any electrical switch, or use any phone or radio in the vehicle.
 - Do not start the vehicle's engine or electric generator.
 - Contact the nearest gas supplier or qualified service technician for repairs.
 - If you cannot reach a gas supplier or qualified service technician, contact the nearest fire department.
 - Do not turn on the gas supply until the gas leak(s) has been repaired.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



Due to high temperatures, the unit should be located out of traffic and away from furniture and draperies.

Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.

Young children should be carefully supervised when they are in the same room as the unit.

Clothing or other flammable material should not be placed on or near the unit.

Any safety screen or guard removed for servicing the unit must be replaced prior to operating the unit.

The area around the unit must be kept clear from combustible materials, gasoline and other flammable vapors and liquids.

Installation and repairs should be done by a qualified service person. The unit should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartments, burners and circulating air passageways of the unit be kept clean.

WARNING!

This unit must be serviced only by a qualified serviceman. Modification of the appliance can be extremely hazardous and could lead to serious injury or death.

Fuel burning appliances generate toxic flue products. Modification or improper maintenance can cause carbon monoxide in deadly amounts. To prevent this, maintain appliance in safe operating condition.

DO NOT Block or modify any combustion air or flue gas passageways.

DO NOT Add any devices or accessories to this appliance except those specifically authorized by Suburban Manufacturing Co.

DO NOT Install screens over the vent for any reason. Screens will become restricted and cause unsafe furnace operation. Accessories are being marketed for RV products which we do not recommend. For your safety, only factory authorized parts are to be used on your furnace.

ALWAYS Consult a qualified serviceman for any problems or questions you may have pertaining to this appliance.

ALWAYS Inspect the appliance before starting a new heating season, paying special attention to combustion air, flue gas passageways and gas lines.

OPERATING INSTRUCTIONS

Direct Spark Ignition

IMPORTANT: Failure to follow these lighting instructions exactly may result in damage to the unit.

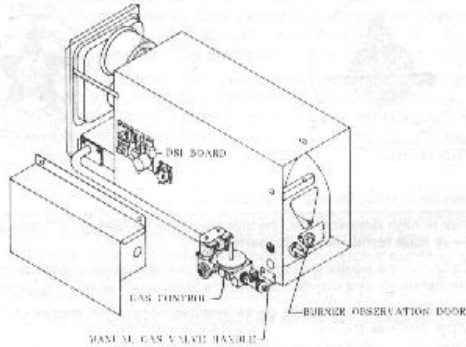


Figure 1

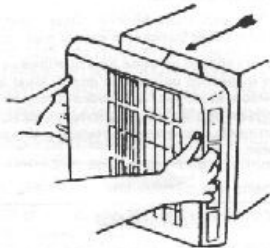


Figure 2

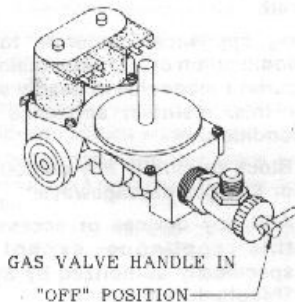


Figure 3

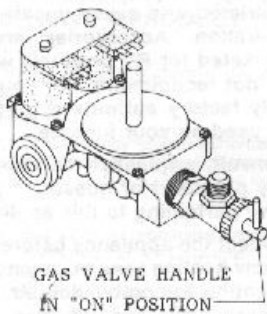


Figure 4

SEQUENCE OF NORMAL OPERATION

1. When the thermostat calls for heat, a delay of 15 to 30 seconds will occur before the fan motor is energized.
2. As the fan motor reaches approximately 75 percent of its normal r.p.m. (within 1 to 2 seconds) the micro switch, in response to the air flow, will engage, allowing current flow to the gas valve.
3. The gas valve will open and allow gas to the main burner. The spark produced from the ignitor electrode ignites the main burner.
4. When the thermostat is satisfied or turned back, the gas valve will close and the flame on the main burner will go out. The blower will continue to run for a short period of time and will then shut off. The purpose of this is to remove most of the remaining gases and heat from the heat exchanger.

TIME DELAY FAN RELAY

This relay controls the sequence of the blower operation. When the bimetal disc of the relay is heated internally to the operating temperature, the switch closes. This completes the circuit to the motor. The blower will continue to run as long as the relay is hot even though the thermostat is satisfied and the main burner is off. When the relay sensor cools, after the thermostat is satisfied, the switch opens and the blower shuts off. See Figure 5 for terminal orientation.

LIMIT SWITCH

The purpose of the limit control is to turn off the gas to the main burner if for any reason the furnace becomes abnormally hot. If the circulating air is blocked, even partially, the limit control will function and cause the main burner to cycle. If cycling of the limit control occurs, the circulating air passage should be thoroughly cleaned.

If the limit control is damaged, it cannot be repaired, it must be replaced with a new one.

CAUTION: Never short across or bypass the limit control even for only temporary operation.

MICRO SWITCH

The micro switch has two purposes:

1. It is an "air prover", it operates in response to the flow of air generated by the fan. Hence, if for any reason the air from the fan is not sufficient, the switch will not operate. One cause of insufficient air is a slow motor caused by low voltage.
2. The switch allows time for the blower to pull in a sufficient amount of air to support combustion before it engages. Once it engages, the gas valve opens, gas flows to the main burner and ignition occurs.

BLOWER ASSEMBLY

One motor is used to drive both the combustion air wheel and the circulating air fan blade. Although one motor drives both, the wheel and fan blade are separate. The combustion air blower is sealed so as to allow no passage of air between it and the circulating room air fan. The combustion air blower draws air from the outside atmosphere, discharges it into the combustion chamber, and forces the combustion products out the exhaust tube. The circulating room air fan blade pulls return air in and forces it across the heat chamber discharging it into the area to be heated.

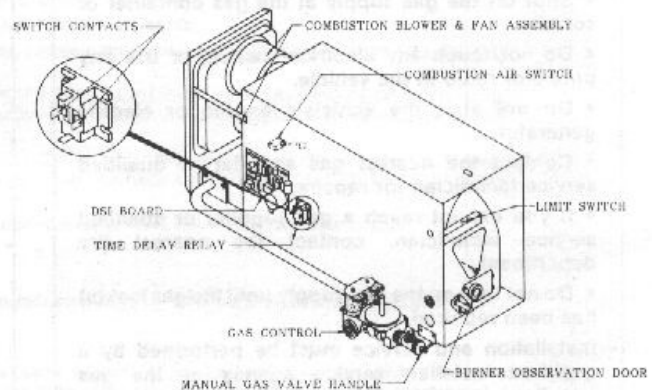


Figure 5

FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A.** This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do **not** try to light the burner by hand.
- B.** BEFORE OPERATING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


WHAT TO DO IF YOU SMELL GAS

- Extinguish any open flame.
- Evacuate all persons from the vehicle.
- Shut off the gas supply at the gas container or source.
- Do not touch any electric switch or use any phone or radio in the vehicle.
- Do not start the vehicle's engine or electric generator.

- Contact the nearest gas supplier or qualified service technician for repairs.
 - If you cannot reach a gas supplier or qualified service technician, contact the nearest fire department.
 - Do not turn on the gas supply until the gas leak(s) has been repaired.
- C.** Use only your hand to turn the handle on the manual shutoff valve. Never use tools. If the handle will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D.** Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. The appliance is equipped with an ignition device which automatically lights the burner. Do **not** try to light the burner by hand.

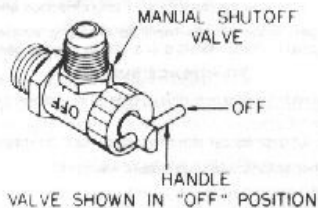

5. Remove furnace front grille.
6. Turn shutoff valve clockwise to "OFF".
7. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to next step.
8. Turn on all electric power to the appliance. These units are for use with LP gas only. LP gas is heavier than air. Therefore, to better clear out any gas, the heater should be operated for five (5) minutes with the blower on and the gas off.
9. Turn shutoff valve counterclockwise to "ON".
10. Replace furnace front grille.
11. Set thermostat to desired setting.
12. If the appliance will not operate, follow the instructions "To Turn Off Gas to Appliance" and call your service technician or gas supplier.

TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove furnace front grille.

4. Turn shutoff valve clockwise to "OFF". Do not force.
5. Replace furnace front grille.

MAINTENANCE AND CLEANING

Listed below are several safety related items that you should follow to assure continued safe operation of the furnace.

WARNING! Should overheating occur, or the gas supply fail to shut off, turn off the manual gas valves to the appliance before disconnecting the electrical supply.

1. Keep the furnace area clear of any combustible materials, gasoline or other flammable vapors and liquids.
2. Before operating the furnace, check the location of the furnace vent to make sure it will not be blocked by the opening of any door on the trailer. If it can be blocked, do not operate the furnace with the door open.
3. Do not restrict the flow of combustion air or the warm air circulation to the furnace. To do so could cause personal injury and/or death.

WARNING! Do not install screens over the vent for any reason. Screens will become restricted and cause unsafe furnace operation. Accessories are being marketed for RV products which we do not recommend. For your safety, only factory authorized parts are to be used on your furnace.

4. Never operate the furnace if you smell gas. Do not assume that the smell of gas in your RV is normal. Any time you detect the odor of gas, it is to be considered life threatening and corrected immediately. (See safety notice on front cover of this manual.)
5. Immediately shut furnace down and call a service agency if furnace cycles erratically or delays on ignition.
6. Always follow the lighting instructions. Do not deviate from the step-by-step procedures.
7. When considering add-on rooms, porch or patio, attention must be given to the venting of your furnace. For your safety, do not terminate furnace vent inside add-on rooms, screen porch or onto patios. Doing so will result in products of combustion being vented into the room or occupied areas.

6. Never attempt to repair damaged parts. Always have them replaced by a qualified service agency.

9. Never attempt to repair the furnace yourself. Seek the help of a qualified service person.

PREVENTIVE MAINTENANCE

You, as the owner/user, should inspect the furnace monthly during the heating season for (1) presence of soot on vent and (2) proper burner operation.

A. Periodically observe the main burner flame to assure it is burning with a hard blue flame with well defined burner ports (See Figure 6). If flame appears yellow or burner has a lazy flame, shut furnace down and contact a qualified service person.

NOTE: To observe flame, remove front discharge grille. Operation of burner can then be observed through the viewing window on front of chamber (See Figure 7).

B. Periodically inspect the vent for obstructions or presence of soot. Soot is formed whenever combustion is incomplete. This is your visual warning that the furnace is operating in an unsafe manner. If soot is present, immediately shut furnace down and contact your dealer or a qualified service person. Do not operate the furnace if soot is present on vent. To do so could result in personal injury and/or death.

Your furnace should be inspected before use at least annually by a qualified service agency. Particular attention should be given to the following items:

1. Inspect combustion chamber and venting system for restrictions in exhaust or intake. It is imperative that the flow of intake combustion air and the flow of exhaust gases being expelled to the outside atmosphere not be obstructed.
2. Inspect all gaskets. If any gaskets show signs of leakage or deterioration, replace them. Safe operation of the furnace depends on all gaskets being tight.
3. Inspect return air inlet openings to the furnace. Remove any restrictions to assure adequate air flow.
4. Inspect main burner. To properly inspect burner, it must be removed (see Figure 8). If excessive rust and corrosion are present on burner surface, the burner must be cleaned or replaced. The burner may be cleaned with a steel wire brush and the burner ports and venturi blown clean using compressed air.

If the main burner has been allowed to operate with a high yellow flame, a soot formation may be deposited inside the combustion chamber. The carbon deposit may be of such quantity that cleaning will be necessary. A vacuum cleaner is ideal to clean out any carbon deposit in the combustion chamber.

This unit is equipped with sealed motor and requires no oiling.

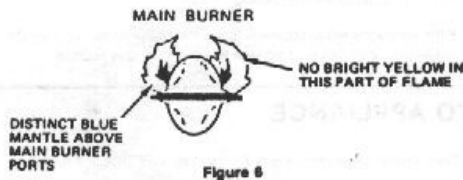


Figure 6

TO REMOVE FURNACE FOR SERVICE

1. Remove the front grille by pulling straight out.
2. Disconnect wiring.
3. Disconnect gas supply. (Be sure gas supply to the unit is turned off).
4. Remove screws securing furnaces to cabinet.
5. Remove the vent cap screws (outside) and remove vent assembly.
6. Pull furnace forward and remove.

FURNACE ASSEMBLY REMOVED

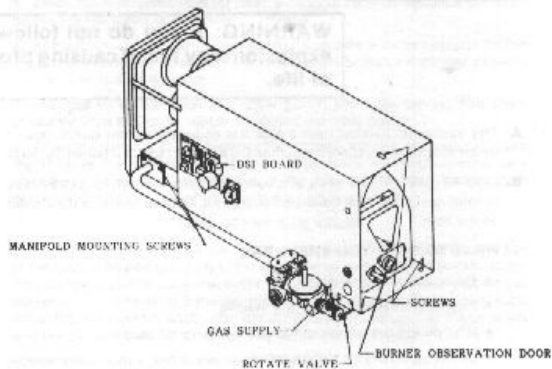


Figure 7

TO REMOVE BURNER & GAS VALVE

1. Shut off gas supply.
2. Disconnect electrical supply.
3. Remove front grille.
4. Remove nuts holding burner access door and remove door.
5. Remove nut holding burner in place.
6. Raise burner off mounting pin and remove.
7. Burner orifice may now be serviced with long extension and 1/2" socket.
8. To replace gas valve, remove manifold mounting screws and remove manifold from furnace. Place manifold in a vise to remove gas valve.

TO REPLACE BURNER

1. Center orifice end of burner over orifice, slide other end over burner mounting pin.
2. Reassemble nut over burner mounting stud until it is firmly against burner.
3. Reinstall burner access door and secure with nuts.

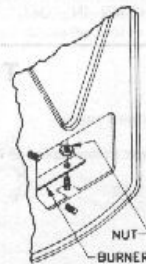


Figure 8

SERVICE HINTS, DIAGNOSIS & CORRECTIVE MEASURES

INSTALLATION SHOULD BE DONE BY A QUALIFIED SERVICE PERSON. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC. IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATING AIR PASSAGeways OF THE APPLIANCE BE KEPT CLEAN.

A. COMPLAINT — NO HEAT

1. Check electrical supply to make sure that 12 volt D.C. is available at unit. Battery must be charged. If battery is low, there may be sufficient power to run the blower but not enough to run the blower at full speed. If blower does not run at it's prescribed speed, the micro switch cannot engage and gas will not flow to the main burner. Be sure the connections to the voltage lines in the terminal block are tight.
2. Manually rotate fan to make sure motor is free to turn.
3. Check for blown fuse in 12 Volt circuit to furnace.

4. SHORT CIRCUIT CHECKOUT: If fuses are blown, a short is indicated and should be checked.

- Turn off all appliances including furnace.
- Install an ammeter on the positive (+) lead of the battery. Amperage reading should be 0. If an amperage reading is noted, a short exists in the vehicle electrical system.
- Disconnect the red (+) DC lead at the furnace. If the amperage continues, the short is exterior to the furnace.

5. GAS SUPPLY: Be sure manual gas valve is in the open position.

6. THERMOSTAT OFF: Check to be sure thermostat is properly wired and is calling for heat.

7. MALFUNCTIONING MICRO SWITCH: Be sure the micro switch is moving far enough to close its contacts. If the switch is not closing, clean any dust or dirt from the actuator pin. Other reasons for switch not operating are:

- Insufficient fan speed** (slow motor due to low charged battery, faulty motor or lint and dust accumulation restricting return air to furnace). Check wiring in accordance with unit's wiring diagram to assure that the proper polarity of the 12 Volt DC power supply is observed. On certain models this polarity must be observed so the motor will run the proper direction of rotation to insure correct air delivery.
- Faulty Micro Switch:** Replace switch if valve does not open when switch is engaged. Switch should also be replaced if battery is fully charged and with the fan motor running at top speed the switch fails to engage within 3 to 4 seconds.

NOTE: To service switch, heating assembly must be pulled out

8. GAS CONTROL VALVE: With test light, check valve terminals. If voltage is present, but valve is not opening (when micro switch engages), replace control valve.

9. FAN NOT OPERATING: Check for burned-out motor or loose wiring terminals.

10. DEFECTIVE FAN RELAY: Relay may be at fault if motor fails to start when thermostat calls for heat. This can be suspected if the thermostat is raised and the motor fails to operate within 60 seconds.

B. COMPLAINT — EXCESSIVE NOISE

- Motor or blade out of balance. Replace motor or blade.
- Motor hum, replace motor.

C. COMPLAINT — ERRATIC FAN OPERATION

A loose terminal or a defective relay may cause the motor to cycle off while the thermostat is calling for heat. An outage will occur because the blower is not purging the system of combustion products.

THERMOSTAT ADJUSTMENT

This unit is equipped with an adjustable thermostat. Improper setting of the heat anticipator can cause either abnormally short or long heating cycles resulting in discomfort.

For correct heating anticipator adjustment, proceed as follows:

Cycle system to determine if cycling rate is satisfactory. If adjustment is necessary, move pointer to a higher setting for longer "ON" cycle and to a lower setting for shorter "ON" cycle.

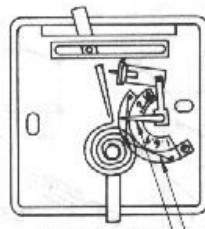


Figure 9

HIGH ALTITUDE DERATION

These units are certified by the Canadian Gas Association for operation without modification at altitudes up to 4500 feet.

Operation at increased elevations require deration of 4% for each 1000 feet above sea level. Example: At 8,000 feet, derate furnace 32%.

If the unit is not properly derated the following conditions will exist:

- Due to the lack of sufficient oxygen for proper combustion, carbon monoxide will be produced and exhausted through the vent. Entry of these fumes into the vehicle (due to improper installation of the vent or through another opening in the vehicle exterior) could create a hazardous condition which could endanger the life of anyone exposed to these fumes for a prolonged period of time.
- Due to incomplete combustion of LP gas at the burner, the actual heat output of the furnace will be considerably less than the rating of the unit. Fuel which is not burned will be wasted.

If the unit is properly derated, it will produce approximately the same amount of heat at higher elevations, but will do so with considerably less fuel.

The following chart lists recommended orifice sizes for various altitudes:

ALTITUDE IN FEET	ORIFICE SIZE MODEL DD-17DSI
0-4500	56
5000	57
6000	58
7000	58
8000	59
9000	59
10000	61
11000	61
12000	63

190-258 / 530415

180-225 (NT12)

DIRECT SPARK IGNITION SYSTEM

The direct spark ignition system consists of a solid state printed circuit control module, an electrode assembly, a 12 volt gas control and connecting high and low voltage wires.

To ignite the burner, it is necessary only to set the thermostat above room temperature. The thermostat, in series with the micro switch, powers the ignitor to simultaneously open the main burner valve and provide the ignition spark. Should the flame not be established within a period of 15 seconds, the system provides safety shut-down.

Electronic flame sensing circuitry in the ignitor detects the presence or absence of main burner flame. If the flame is not established during the Flame Establishing Period (6 seconds), the system closes the gas valve and locks out. To reactivate ignition, if lock-out has occurred, set the thermostat to the "OFF" position for 4 to 5 seconds, then reset to the "ON" position.

TROUBLE SHOOTING GUIDE

CAUTION: Servicing this device should only be performed by a qualified serviceman with due regard for safety as improper actions could result in a hazardous condition, resulting in serious injury or death.

WARNING! Do not apply power to control module unless wiring connections are complete and electrode is properly grounded. Use extra caution in areas where high voltage is present.

- Input Polarity:** If a spark is present and the gas valve opens but the system shuts down after the trial period, check input voltage for proper polarity.
- Grounding:** It is essential to proper operation that the system be properly grounded. If a spark is present and the gas valve opens but the system shuts down after the trial for ignition period, check for proper ground. The following items should be checked:
 - Ground screw connecting black motor lead.
 - The burner must be securely fastened to mounting pin in heat chamber.
- Wiring:** Check all wiring for proper and secure connections. Be sure the AMP connector is fully engaged on the control board. Check the high voltage wire for proper connection at both ends. Clean any corrosion that may interfere with good electrical contact.
- High Voltage Malfunction:** If during the trial for ignition, the spark is intermittent and the valve may or may not open, the following should be checked:
 - Electrode spark gap - should be 1/8" + 1/32".
 - Ceramic housing - check for cracks.
 - Electrode lead wires - check for cracks or breaks.

E. Valve Malfunction: If there is power to the gas valve and a spark during the trial for ignition, but the valve will not open, check the valve for an open coil or other malfunction.

F. Erratic Operation: If the system operates properly for a period of time but randomly shuts down during the duty cycle, or will not operate during cold starts,

check the flame proving circuit (sensor wire) with a D.C. Microamp Meter. The current may cause nuisance tripping. If this condition is experienced, the electrode location should be checked to make sure the sensor electrode is in the flame.

G. The solid state control module is not field repairable. Any modifications or repairs will invalidate the warranty and agency certifications.

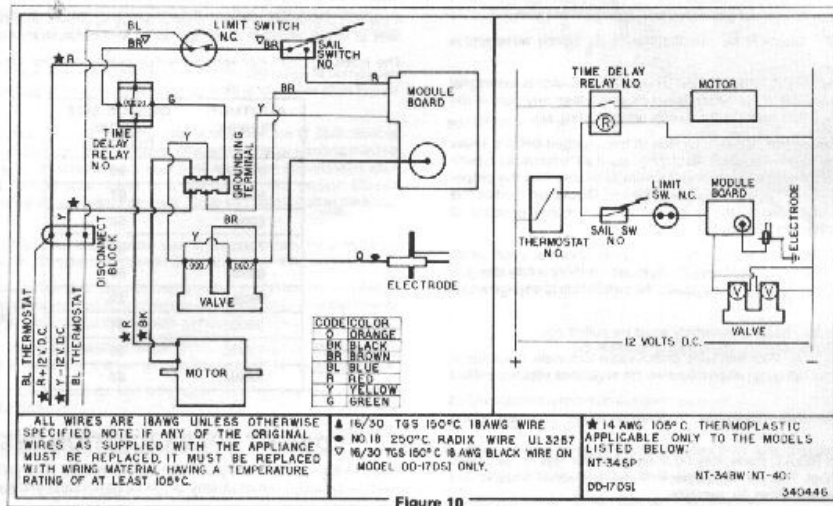


Figure 10

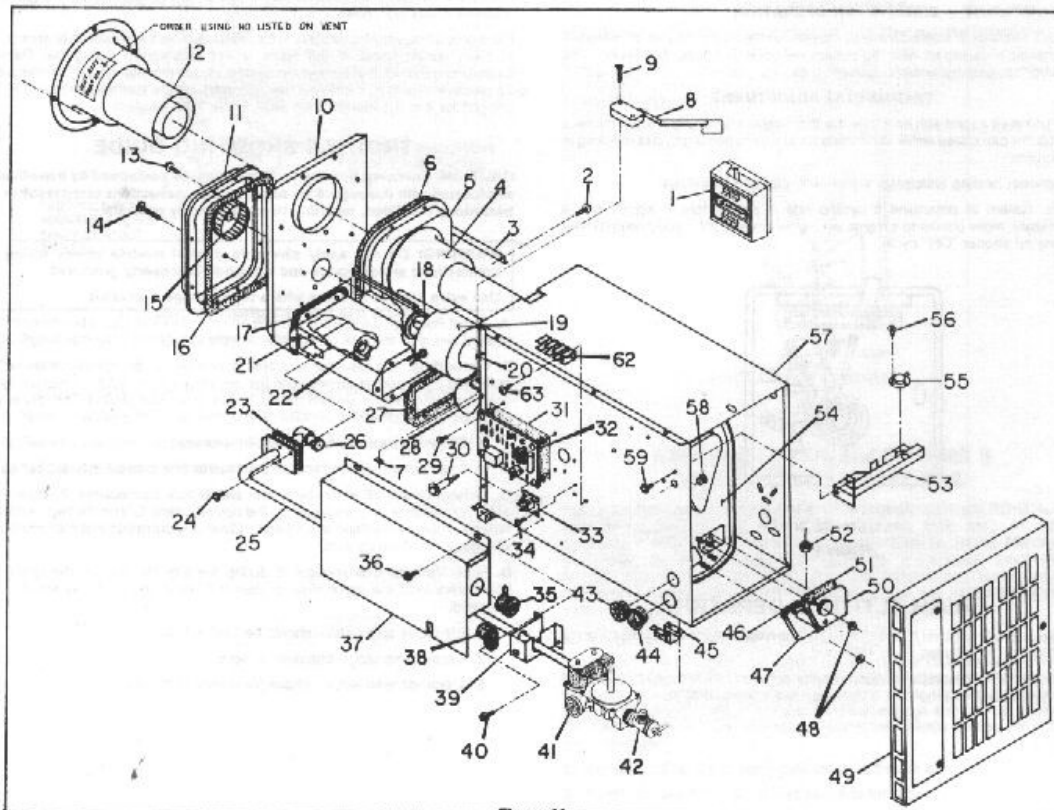


Figure 11

REPLACEMENT PARTS LIST

MODEL DD-17DSI

Only factory authorized parts are to be used. Do not attempt to repair defective parts.

When ordering repair parts from your dealer, a Suburban Service Center, or distributor, always give the following information:

1. Part Number (Not Item No.)
2. Part Description
3. Model and Serial Number of Furnace
4. Number of Parts Required

The following parts are for all of the above models unless otherwise specified.

Item No.	Description	Part Number
1	Thermostat	160902
2	Screw (2 Required)	121717
3	Brace, Combustion Air Housing	062945
4	Cup, Intake Air	051074
5	Housing, Combustion Air (Front)	390536
6	Gasket, Combustion Air Housing (Front)	070862
7	Fastener, Tinnerman (2 Required)	121661
8	Micro Switch	231930
9	Screw (2 Required)	121247
10	Panel Assembly, Combustion Air	390537
11	Combustion Air Housing Rear	390535
12	Vent Assembly (Order by Part No. listed on vent assembly supplied with furnace. If Part No. label is not attached, contact SUBURBAN MANUFACTURING CO.)	
13	Screw (8 Required)	121717
14	Screw	121715
15	Wheel, Combustion Air	350126
16	Gasket, Combustion Air Housing (Rear)	070906
17	Gasket, Burner Tunnel	070859
18	Gasket, Motor	070849
19	Motor	231915
20	Impeller, Room Air	350125
21	Burner Tunnel Assembly	051159
22	Burner	010763
23	Gasket, Manifold	070847
24	Screw (3 Required)	121717
25	Manifold	171301
26	Orifice	530415
27	Gasket, Burner Tunnel (Chamber End)	070848
28	Cabinet Back Assembly	101422
29	Screw (2 Required)	121357
30	Screw	121713
31	Insulator, Module Board	070807
32	Module Board	231741
33	Relay, Time Delay	231769
34	Screw (2 Required)	121357
35	Bushing, Strain Relief	230216
36	Screw (2 Required)	121717
37	Cover, Module Board	090430
38	Wire Clamp	061663
39	Bracket Manifold	063125
40	Screw (2 Required)	121463
41	Valve	161071
42	Valve, Manual Shut-Off	160740
43	Bushing, Universal	070362
44	Bushing, Open/Close	070855
45	Bracket, Cabinet Tie-Down (4 Required)	062942
46	Gasket (Electrode)	070851
47	Electrode	231934
48	Nut (4 Required)	121694
49	Grille Assembly	030944
50	Door, Burner Access	030767
51	Gasket, Burner Access Door	070850
52	Nut	121474
53	Bracket, Limit Switch	062944
54	Chamber Assembly (Comes with Item No. 4)	021049
55	Limit Switch	231768
56	Screw (2 Required)	121502
57	Cabinet Wrap	101328
58	Bushing	070856
59	Screw (2 Required)	121717
60	Fuseholder (Not Shown)	231908
61	Electrode Wire (Not Shown)	231783
62	Splicer	230714
63	Screw (2 Required)	121244

LIMITED WARRANTY

SUBURBAN RECREATIONAL VEHICLE FURNACE

LIMITED ONE YEAR WARRANTY

This Suburban product is warranted to the original purchaser to be free from defects in material and workmanship under normal use and maintenance for a period of one year from date of purchase whether or not actual use begins on that date. It is the responsibility of the consumer/owner to establish the warranty period. Suburban does not use warranty registration cards for its standard warranty. You are required to furnish proof of purchase date through a Bill of Sale or other payment record.

Suburban will replace any parts that are found defective within the first year and will pay a warranty service allowance directly to the authorized Suburban Service Center at rates mutually agreed upon between Suburban and its authorized service centers. Replacement parts will be shipped FOB the shipping point within the Continental United States, Alaska and Canada to authorized service centers performing such repairs. Before having warranty repairs made, confirm that the service agency is an authorized service center for Suburban. DO NOT PAY THE SERVICE AGENCY FOR WARRANTY REPAIRS; SUCH PAYMENTS WILL NOT BE REIMBURSED.

For warranty service, the owner/user should contact the nearest authorized Suburban Service Center, advising them of the model and serial numbers (located on the furnace) and the nature of the defect. Transportation of the unit to and from the Service Center and/or travel expenses of the Service Center to your location are the responsibility of the owner/user. A listing of authorized Service Centers is included in the owner's packet supplied with the furnace and a current listing may be obtained from Suburban. If you cannot locate an authorized service center locally, the service agency chosen to perform warranty repairs must contact our Service Department at 615-775-2131 for authorization. Unauthorized repairs made will not be paid by Suburban.

LIMITED FOUR YEAR WARRANTY ON HEAT EXCHANGER

The furnace heat exchanger is further warranted to be free from defects in material and workmanship during the second through fifth year after the date of original purchase. A replacement heat exchanger will be provided under the same conditions as stated in the one year warranty EXCEPT no labor reimbursement will be provided.

LIMITATION OF WARRANTIES

ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH EACH LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER OR OTHER PERSON WHOMSOEVER.

SUBURBAN WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation, operating and service instructions owner's manual including cleaning of component parts; such as, orifices and burners.
2. Initial checkouts and subsequent checkouts which indicate the furnace is operating properly, or diagnosis without repair.
3. Damage or repairs required as a consequence of faulty or incorrect installation or application not in conformance with Suburban instructions.
4. Failure to start and/or operate due to loose or disconnected wires; water or dirt in controls, fuel lines and gas tanks; restriction or alteration of return air circulation; low voltage.
5. Routine adjustments that may be required to the thermostat, electrode and burner.
6. Costs incurred in gaining access to the furnace.
7. Parts or accessories not supplied by Suburban.
8. Freight charges incurred from parts replacements.
9. Damage or repairs needed as a consequence of any misapplication, abuse, unreasonable use, unauthorized alteration, improper service, improper operation or failure to provide reasonable and necessary maintenance.
10. Suburban products whose serial number has been altered, defaced or removed.
11. Suburban products installed outside the Continental U.S.A., Alaska and Canada.
12. Damage as a result of floods, winds, lightning, accidents, corrosive atmosphere or other conditions beyond the control of Suburban.
13. ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY, ECONOMIC OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.

NO REPRESENTATIVE, DEALER OR OTHER PERSON IS AUTHORIZED TO ASSUME FOR SUBURBAN MANUFACTURING COMPANY ANY ADDITIONAL, DIFFERENT OR OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS SUBURBAN PRODUCT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IF YOU HAVE A PRODUCT PROBLEM

FIRST:

If your RV has its original furnace and is still under the RV manufacturer's warranty, follow the steps described in your RV owner's manual.

SECOND:

Contact a conveniently located authorized Suburban Service Center. A list of such service centers is enclosed with Suburban's Installation, Operating and Service Instructions book. Describe to them the nature of your problem, make an appointment, if necessary, and provide for delivery of the furnace to the selected service center.

THIRD:

Contact: Suburban Manufacturing Company
Customer Service Department
Post Office Box 399
Dayton, Tennessee 37321
Telephone: (615) 775-2131